

PHANTOM E SERIES

PROFESSIONAL DIRECT DRIVE ELECTRIC PRESSURE WASHERS

FEATURES

- » Baldor commercial grade electric motors
- » Industrial Comet triplex pump with external unloader and bypass
- » Ultra lightweight corrosion resistant frame with 1 1/4" tubing operator handle
- » Adjustable pressure
- » 10" tubed pneumatic tires
- » Thermal relief protection
- » 50 mesh stainless steel inlet filter
- » 3/4" cold rolled steel axle
- » Dual anti-vibration rubber isolators


Units include 50' steel braided non-marking gray hose, 36" spray wand with molded grip and gun, 5 quick connect spray nozzles, and a high draw chemical injector. Hose reel kits and other options are available. See your PSI dealer for details.



P-E3522BCH



PSI pressure washers feature Comet pumps for their unmatched quality and life.

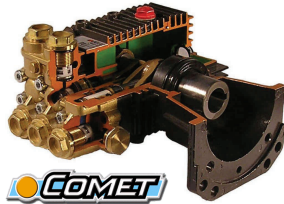

PUMP FEATURES:

- » Forged brass manifold with lifetime warranty
- » Forged bronze connecting rods
- » High efficiency, stainless steel check valves
- » Abrasion proof, heat resistant, solid ceramic plungers
- » High quality oversized bearings
- » Increased fin depth for maximum heat dissipation



SPECIFICATIONS

MODEL	PSI	GPM	RPM	VOLTS	AMPS	PUMP	HP
P-E2011BCL*	1100	2.0	1750	120	14.5	LWS2020E	1.5
P-E2011BCH*	1100	2.0	3450	120	15.0	LWD2020E	1.5
P-E2015BCX**	1500	2.0	3450	120	18.5	BXD2020E	2.0
P-E2015BCL**	1500	2.0	1750	120	18.0	LWS2020E	2.0
P-E2015BCH**	1500	2.0	3450	120	19.0	LWD2020E	2.0
P-E3522BCH***	2200	3.5	3450	240	19.0	LWD3522E	5.0

* Units come standard with switch, box, cord, GFCI and 15A plug. Meets UL standards.

** Units come standard with switch, box, cord, GFCI and 20A plug. Meets UL standards.

*** P-E3522BCH with switch, box and cord. GFCI is optional.



Pressure Systems Innovations
 3750 Investment Lane » Suite 4 » West Palm Beach, FL 33404
 Phone: 561.249.2830 » Fax: 561.249.2871 » sales@pressuresystemsinnovations.com
 www.PressureSystemsInnovations.com