

E SERIES: HAND CARRY DIRECT DRIVE ELECTRIC PRESSURE WASHERS

FEATURES

- » Commercial grade electric motors
- » Industrial Comet triplex pump with external unloader and bypass
- » Thermal relief protection
- » 50 mesh stainless steel inlet filter
- » Units come standard with switch, box, 25' cord, GFCI with 15A or 20A plug, and meet UL standards
- » Versatile compact design allows for stationary use or easy transportation to work site
- » Quad anti-vibration rubber isolators




E-C2015BCL



Units include 50' steel braided non-marking gray hose, 36" spray wand with molded grip and gun, 5 quick connect spray nozzles, and a high draw chemical injector. Hose reel kits and other options are available. See your PSI dealer for details.

PSI pressure washers feature Comet pumps for their unmatched quality and life.

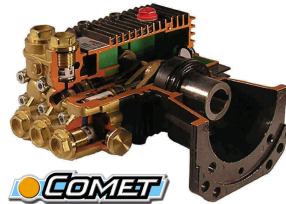

PUMP FEATURES:

- » Forged brass manifold with lifetime warranty
- » Forged bronze connecting rods
- » High efficiency, stainless steel check valves
- » Abrasion proof, heat resistant, solid ceramic plungers
- » High quality oversized bearings
- » Increased fin depth for maximum heat dissipation



SPECIFICATIONS

MODEL	PSI	GPM	RPM	VOLTS	AMPS	PUMP	HP
E-C2015BCX	1500	2.0	3450	120	18.5	BXD2020E	2.0
E-C2015BCL	1500	2.0	1750	120	18.0	LWS2020E	2.0
E-C2015BCH	1500	2.0	3450	120	19.0	LWD2020E	2.0
E-C3522BCH	2500	3.5	3450	240	19.0	LWD3522E	5.0

* Axial pump with integral unloader



Pressure Systems Innovations
3750 Investment Lane » Suite 4 » West Palm Beach, FL 33404
Phone: 561.249.2830 » Fax: 561.249.2871 » sales@pressuresystemsinnovations.com
www.PressureSystemsInnovations.com