

# PHANTOM SILVER HI FLOW PROFESSIONAL DIRECT DRIVE PRESSURE WASHERS

## FEATURES

- » Honda Engines with low oil protection
- » Hi Flow Series industrial Comet triplex pump with external unloader and bypass system
- » Adjustable pressure valve for cleaning convenience
- » Ultra lightweight aluminum frame with 1 1/4" tubing operator handle
- » 13" rugged pneumatic tires
- » Thermal safety relief protection
- » User friendly oil drain system
- » 50 mesh stainless steel inlet filter
- » 3/4" cold rolled steel axle
- » Dual anti-vibration rubber isolators



P-S5030HC

POWERED by  
**HONDA**




**HI-FLOW**  
SERIES

Units include 50' steel braided non-marking gray hose, 36" spray wand with molded grip and gun, 5 quick connect spray nozzles, and a high draw chemical injector. Hose reel kits and other options are available. See your PSI dealer for details.



**PSI pressure washers feature Comet pumps for their unmatched quality and life.**

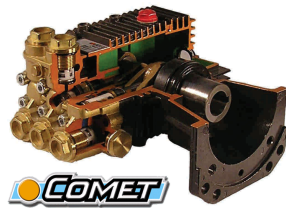

### PUMP FEATURES:

- » Forged brass manifold with lifetime warranty
- » Forged bronze connecting rods
- » High efficiency, stainless steel check valves
- » Abrasion proof, heat resistant, solid ceramic plungers
- » High quality oversized bearings
- » Increased fin depth for maximum heat dissipation



## SPECIFICATIONS

MODEL	PSI	GPM	TIRES	ENGINE	PUMP	DIMENSIONS	UNIT WEIGHT
P-S5030HC	3000	5.0	13"	Honda GX390	ZWD5030	40" x 26" x 27"	119 lbs.



Pressure Systems Innovations  
3750 Investment Lane » Suite 4 » West Palm Beach, FL 33404  
Phone: 561.249.2830 » Fax: 561.249.2871 » sales@pressuresystemsinnovations.com  
www.PressureSystemsInnovations.com